




# TECH TOOL


## QUICK GUIDE



TECH TOOL




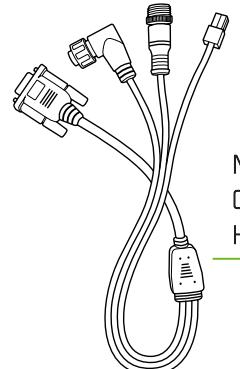


MAIN  
COMMUNICATION  
HARNESS

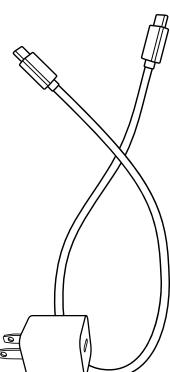

CHARGING  
HARNESS

## GETTING CONNECTED

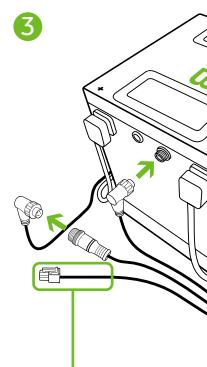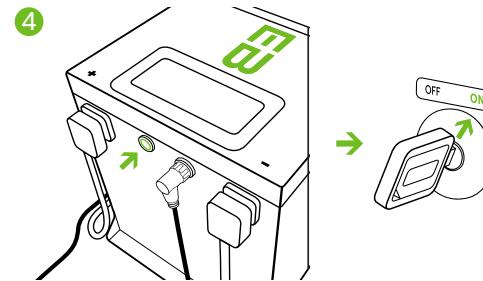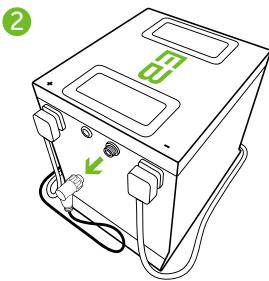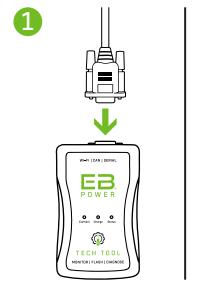

4-Pin Serial Communication Connection

This connection is vehicle-specific. Usage and placement may vary depending on the application.

For correct connection procedures, please refer to the [Connection Guide](#) within the web interface/app after finished with this Quick Guide.




**INCORRECT USE OF THIS CONNECTION MAY RESULT IN DAMAGE TO THE VEHICLE AND/OR TECH TOOL.**



Continued on next page. ➔



## LED READOUT

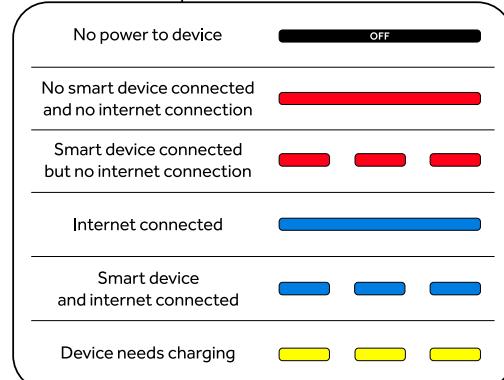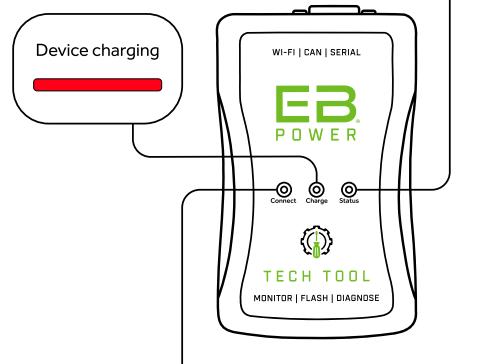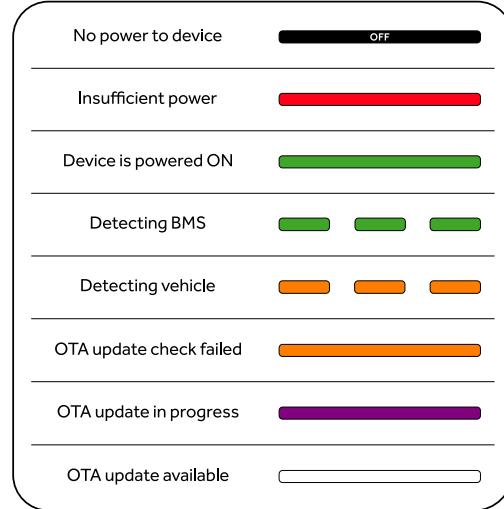

**EB**  
POWER